

CONTENT

NEW Models

H20 Series



 
H20 1-3

H20S w/Sensor

H20R Rechargeable

H20RS w/Sensor/Rechargeable

E20 Series



E20 4

H30 Series



H301 5-8

H302 w/Lens

H301R Rechargeable

H302R w/Lens/Rechargeable



H301S w/Sensor

H302S w/Lens/Sensor

H301RS w/Sensor/Rechargeable

H302RS w/Lens/Sensor/Rechargeable










H301L w/Ambient Light Sensor

H302L w/Lens

H301RL Rechargeable

H302RL w/Lens/Rechargeable



H Series

	H101	9
	H101S w/Sensor	11
	H101R Rechargeable	13
	H101RS w/Sensor/Rechargeable	15
	H102 w/Lens	17
	H102S w/Lens/Sensor	19
	H102R w/Lens/Rechargeable	21
	H102RS w/Lens/Sensor/Rechargeable	23

L Series (LED camping lanterns)

	L4R	25
	L3D L3DR	27
	L3R	29
	L2A L2AR	31
	L2R	33

HP Series (Non-Rechargeable)

	HP2A	35
	HP2AS w/Sensor	37



HP2AW w/Dual CCT 39

HP Series (Rechargeable)



HP2R 41



HP2RS w/Sensor 43



HP2RW w/Dual CCT 45

HP Series (Plastic)



HP1R 47



HP3A 49



HP3AS w/Sensor 50



HP1A 51

H Series (Aluminum)



H3AV 52



H1LC Rechargeable 53



HS1L Split Type 54

 


HS1LR Split Type 55



H3A 56

W Series(Safety Whistles)..... 58



W10





W20

Accessories 59



H20

  SHADOW EXPLORER

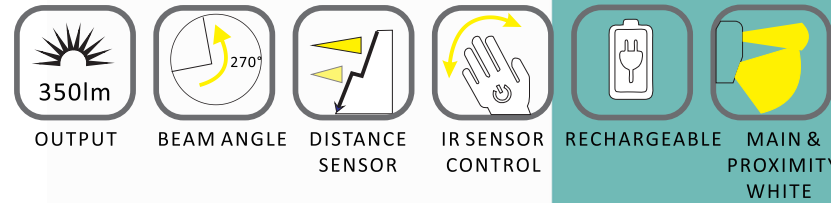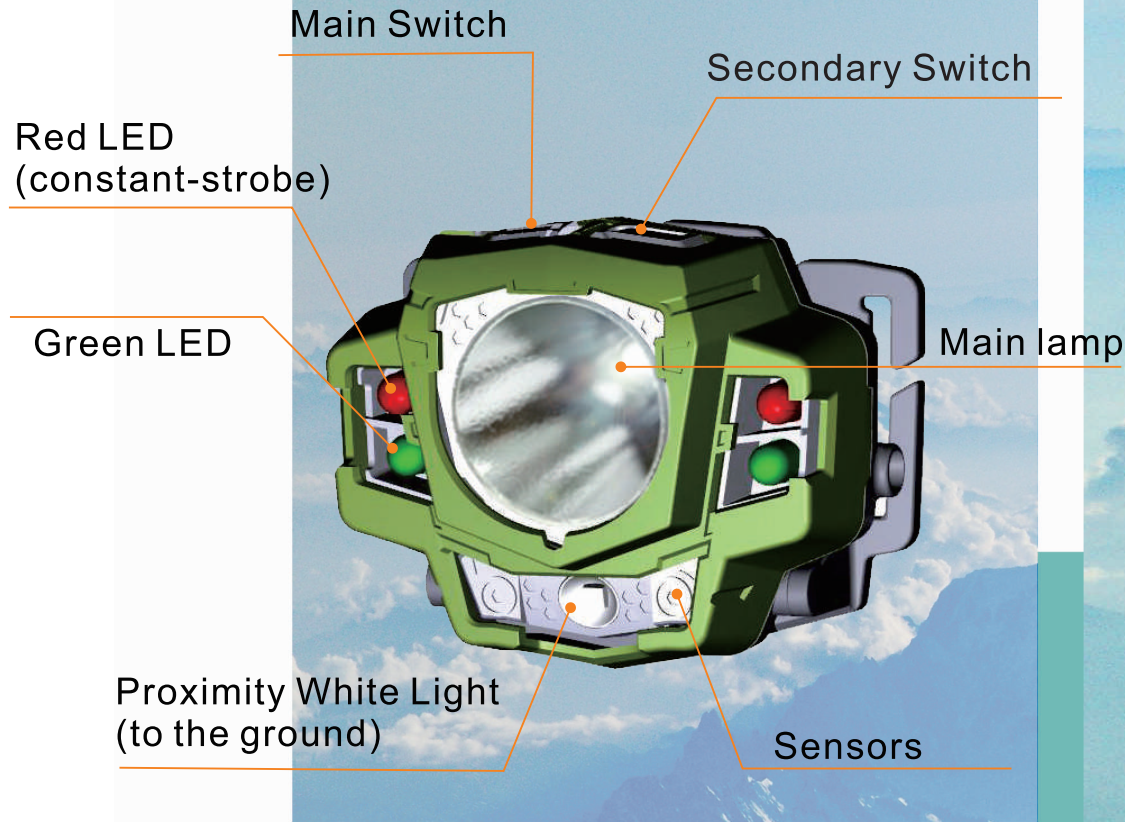

Operation Guide

Main Switch: Once press to Cycle Through Main WHITE HIGH - Proximity WHITE HIGH - Main&Proximity WHITE HIGH - RED ON - GREEN ON - RED&GREEN STROBE (4Hz FLASHING) - OFF

Once Press for OFF if Lamp Stays at Any Modes for over 3 Seconds
Press&Hold for Seconds to Activate Distance Sensor Controlled Mode [only for models with IR Sensors]

 
Secondary Switch: Single Press to Adjust Brightness Levels, or Press&Hold for Seconds to Activate Hand-wave Sensor Controlled Mode [only for models with IR Sensors], and Indicator Light ON, hand-wave for ON/OFF. [Single Press Any Switch for Backing to Normal Mode]

While Main WHITE ON: Single Press to Cycle Through HIGH - MED - LOW - S.O.S
While Main & Proximity WHITE ON: Single Press to Cycle Through HIGH - LOW
While RED or GREEN ON: Single Press to Cycle Through CONSTANT - STROBE (2Hz FLASHING)



Rayfall®


Headlamps

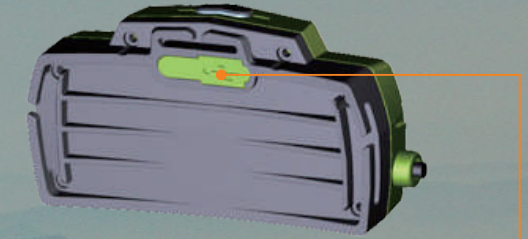

USB rechargeable

Lithium Rechargeable Battery

 Battery Level Indicator

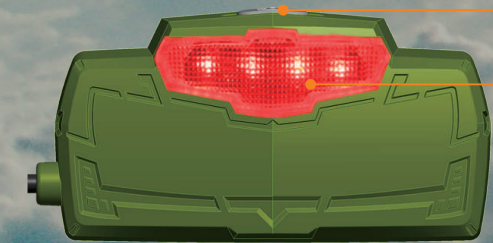

Rear RED LED for Warning



Alkaline AA Batteries*3

Rear Red Light

Single Press the Switch Button on Battery Pack to Cycle Through FLASHING (mode 1) - FLASHING (mode 2) - CONSTANT - OFF
Battery Level Indicator [Battery Pack Switch Color Shows]
[While the Lamp ON: GREEN - Above 50% RED - 50%-25% RED FLASH - Below 25%]
[While Charging: GREEN - Recharging Done RED - Recharging]